CameraMatics how-to guides

Grouping Vehicles


Vehicle Groups

Vehicles can be grouped according to your company requirements. Grouping vehicles helps you to view and organise the vehicles in your fleet - e.g. by location, by depot, etc.

These groups can be used to facilitate views for different Depots and Users.

Accessing Vehicle Groups

- 1. Login to your admin account for the customer on the CameraMatics portal. Go into the CameraMatics Dashboard.
- 2. From the burger menu on the right, select Vehicle Group.

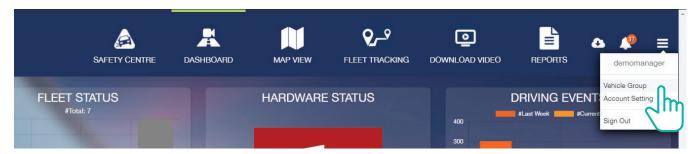

The Vehicle Group page will open. Here you can view any groups which already exist, and create new groups

Creating a Vehicle Group & Moving Vehicles into the Group

- 1. All vehicles which have not yet been assigned a group will fall under the 'Ungrouped Vehicles' category.
- 2. To add a vehicle group, select 'Add Group'. A pop-up window will open up here you can name the new group. Once you have entered a name for your new group, click 'OK' to save the new group type.
- 3. To move vehicles into this group, simply drag and drop the vehicle registration into the specific group.





CameraMatics how-to guides

Grouping Vehicles

Deleting a Vehicle Group

Vehicle Groups can only be deleted if all vehicles are first removed from the group.

- 1. To remove vehicles from a group, simply drag and drop the registration number into a different group, or into 'Ungrouped Vehicles'.
- 2. Once all vehicles are removed from the group, a red 'X' delete button will appear. Click this to delete the group. Deletion will be confirmed in a pop-up window.



All changes made are instantly made visible on the vehicle list on your Dashboard.

Our Customer Success Team are here to help you get the most out of your CameraMatics Platform.

For more 'how-to guides' please visit: www.cameramatics.com/resources/help-centre

If you need more assistance please e-mail the team on: customersuccess@cameramatics.com

