


CameraMatics how-to guides

Follow these steps to unassign drivers from vehicles


Drivers may need to be unassigned from their vehicles.
A vehicle can be unassigned from a driver in the following ways:

Fleet Manager to unassign Driver/s manually through CameraMatics Portal:

1. Log into CameraMatics Portal.
2. Click 'Fleet Info Centre' and select 'Vehicle Assignment'.

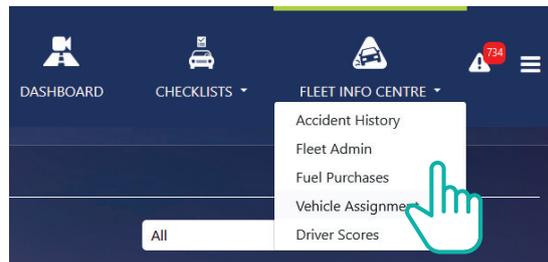


3. Driver list will open where you can see which drivers are assigned to their vehicles.
4. To unassign a driver, select the vehicle or multiple vehicles and press the **Unassign** button.

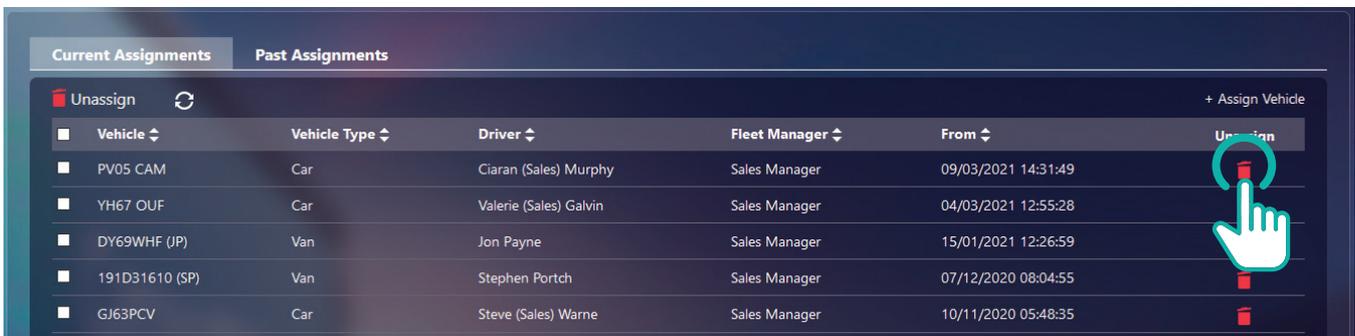

Vehicle	Vehicle Type	Driver	Fleet Manager	From	Unassign
PV05 CAM	Car	Ciaran (Sales) Murphy	Sales Manager	09/03/2021 14:31:49	
YH67 OUF	Car	Valerie (Sales) Galvin	Sales Manager	04/03/2021 12:55:28	
DY69WHF (JP)	Van	Jon Payne	Sales Manager	15/01/2021 12:26:59	
191D31610 (SP)	Van	Stephen Portch	Sales Manager	07/12/2020 08:04:55	
GJ63PCV	Car	Steve (Sales) Warne	Sales Manager	10/11/2020 05:48:35	

5. Confirm that you wish to Unassign the selected vehicle/s.

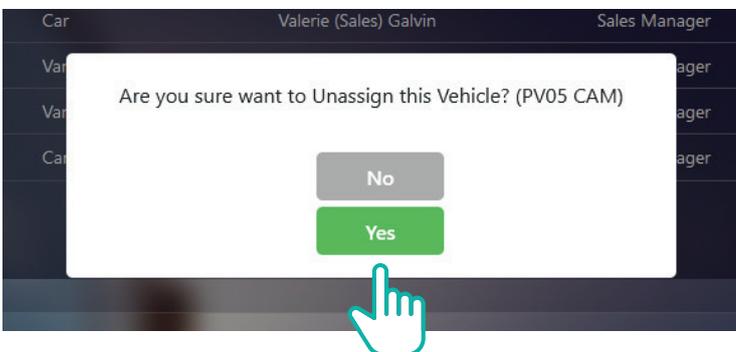


6. A window will appear confirming that vehicle/s were unassigned. Press ok.

CameraMatics how-to guides


Follow these steps to unassign drivers from vehicles

Fleet Manager to set Driver/s to be unassigned from vehicle/s at specific time.

1. Log into **CameraMatics Portal**.
2. Click on **Menu bar** at the top right hand corner of the landing page.
3. Select '**Account Settings**'

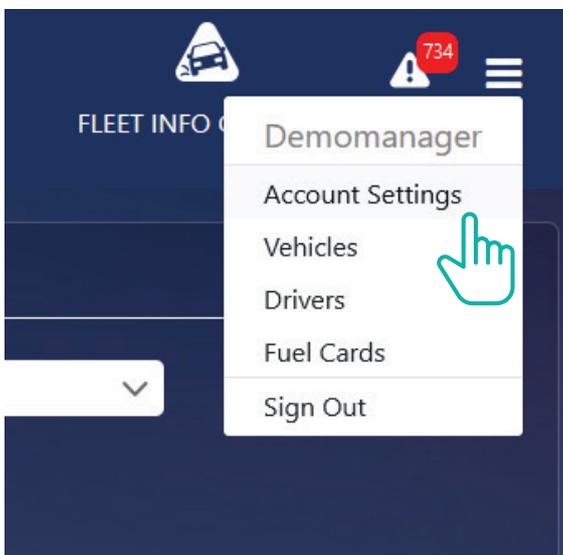

4. Select '**Unassign Vehicle**'.

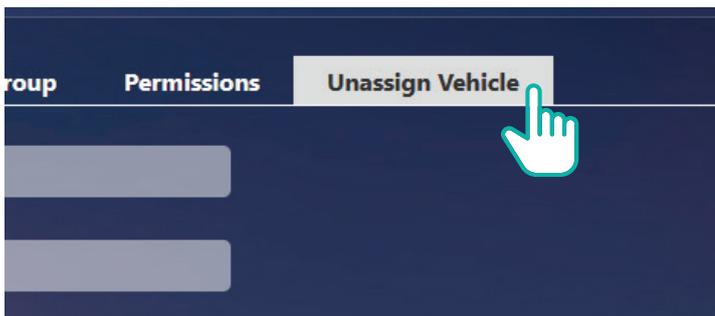


5. You can select the number of vehicles (you can select all or multiple), you wish to be unassigned at a certain time.


CameraMatics how-to guides

Follow these steps to unassign drivers from vehicles

6. Select the time (UTC) that the vehicles are to be assigned.

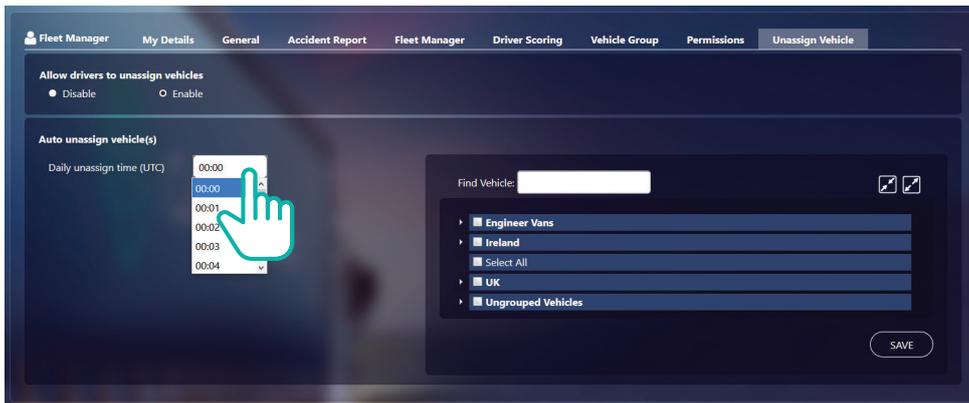

7. Press **Save** and a pop-up window will confirm that settings have been saved.

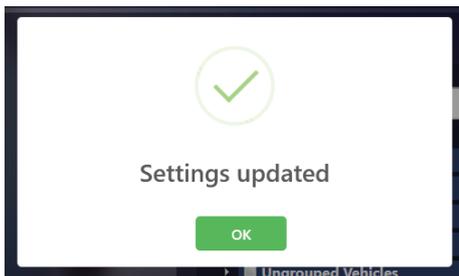

8. All selected vehicles will unassign the drivers at the specific times indicated.



CameraMatics
POWERED BY VISION, DRIVEN BY SAFETY

IRE: +353 (0)1 963 1380 | UK: +44 (0)20 3740 3562 | US: +1 (804) 420-2833


CameraMatics how-to guides

Follow these steps to unassign drivers from vehicles


Enable/Disable Driver from Unassigning themselves from Vehicle

A Driver can be given permission to unassign themselves from a vehicle or be blocked from carrying out this function if it is to be controlled by the Fleet Manager.

1. If a Fleet Manager wishes to allow a driver the permission to unassign himself, select the '**Enable**' button.
2. If a Fleet Manager wishes to block a driver permission to unassign himself, select the '**Disable**' button.

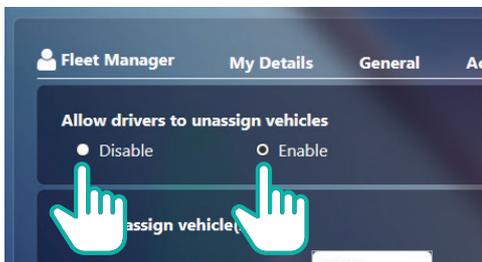

3. Once preferred option is selected, press the **Save** button and a pop-up window will open to confirm that settings have been updated.

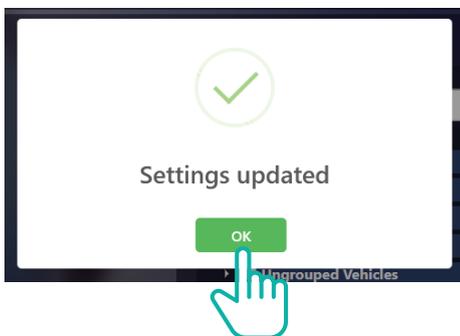

Our **Customer Success Team** are here to help you get the most out of your **CameraMatics Platform**.

For more 'how-to guides' please visit:
www.cameramatics.com/resources/help-centre


If you need more assistance please e-mail the team on:
customersuccess@cameramatics.com

CameraMatics how-to guides

Driver to Unassign themselves from Vehicle in Driver App

To unassign yourself from a vehicle in the **Driver App**:

1. Log into **App**
2. Press the 'X' button located by the vehicle registration.
A window will open asking you to confirm unassigning the vehicle.
3. A confirmation window will confirm driver has been unassigned from vehicle.

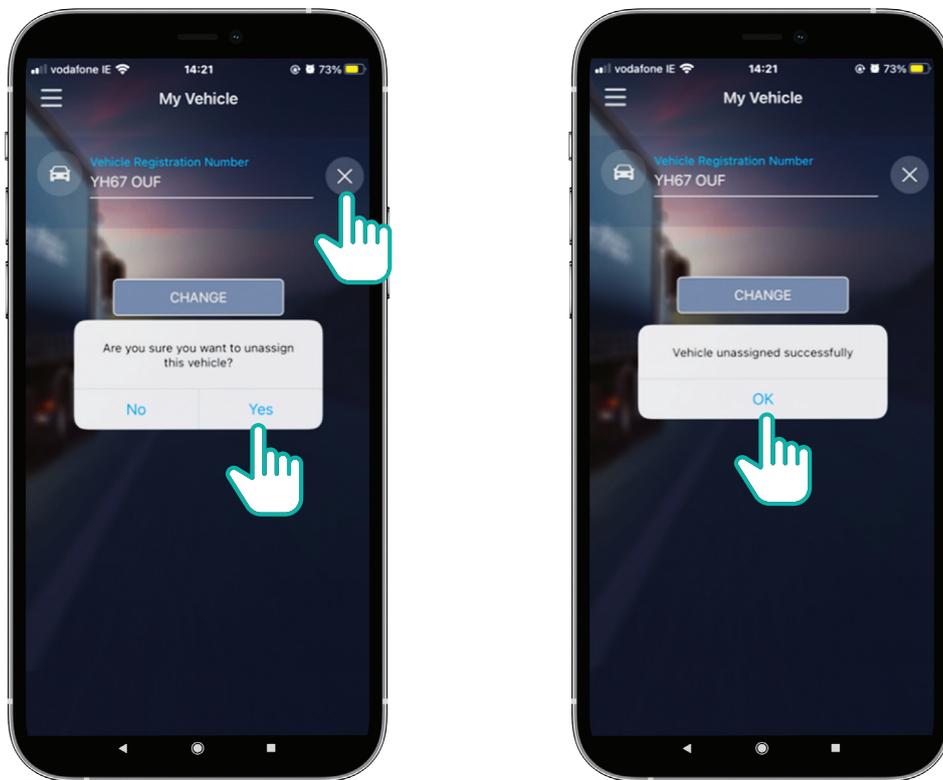

Our **Customer Success Team** are here to help you get the most out of your **CameraMatics Platform**.

For more 'how-to guides' please visit:
www.cameramatics.com/resources/help-centre

If you need more assistance please e-mail the team on:
customersuccess@cameramatics.com