


# Add geofences to monitor areas

The geofence feature enables fleet managers to be alerted when vehicles enter, leave, dwell or speed in specific areas, at specific times. Geofences have multiple uses, from providing a record of all vehicles entering or leaving a work site, to preventing theft.

## Creating a geofence

### Determining the shape and location

From the dashboard, click on 'Geofencing' on the left-hand menu.

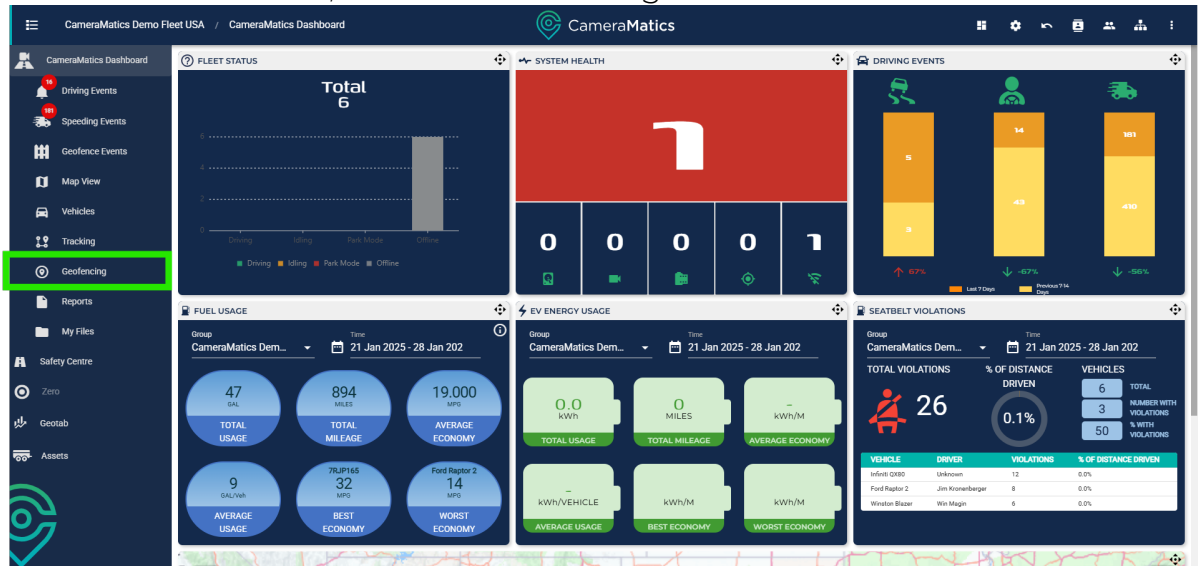

This displays a list of existing geofences. To create a new geofence, simply click on the + button highlighted below.

#### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

#### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

#### UK HEAD OFFICE

Unit F3, LEFA Business Park,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562


#### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)

#### Provision Vehicle Camera Limited t/a CameraMatics


Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne

[CAMERAMATICS.COM](https://www.cameramatics.com)

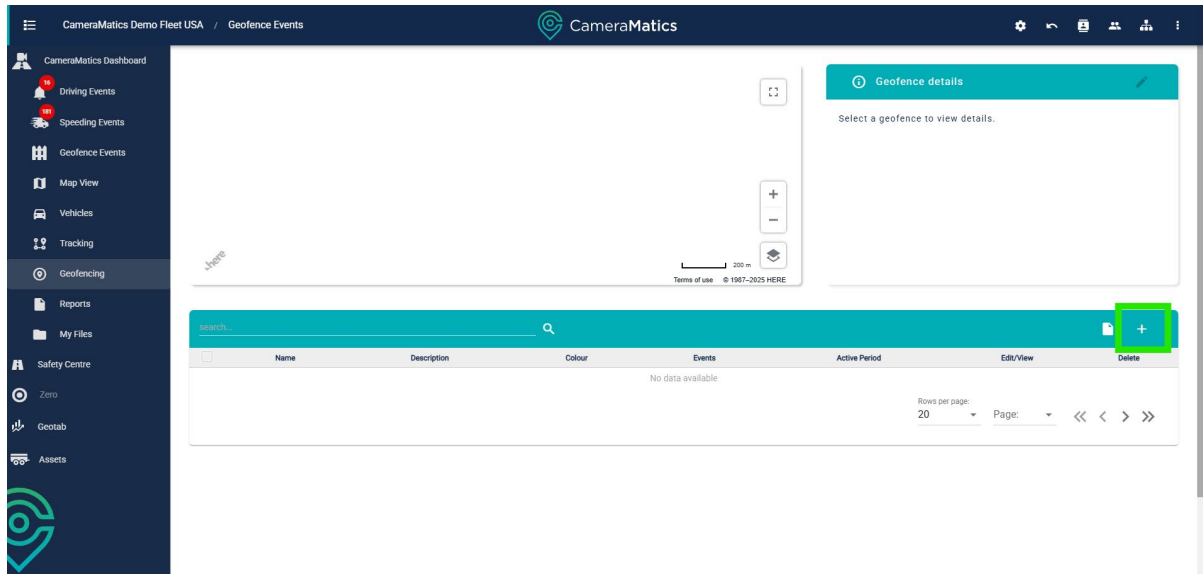

## Define the geofence.

First, find the precise location on the map, you can use the full-screen option to view it better.

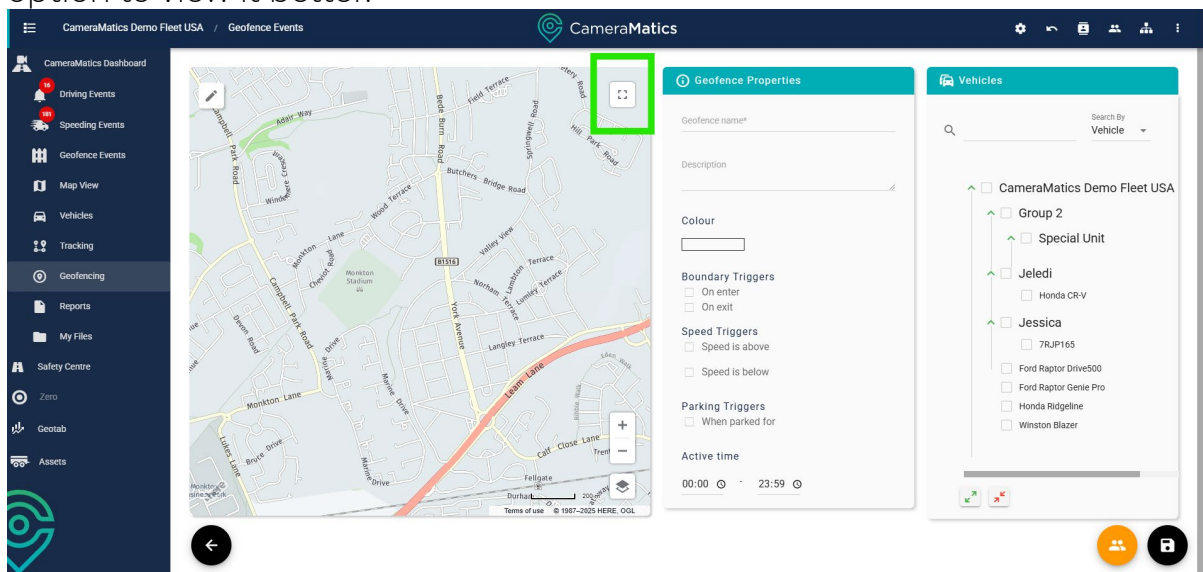

If necessary, select satellite on the view options to give a better view.

### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

### UK HEAD OFFICE

Unit F3, LEFA Business Park.,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562


### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)


### Provision Vehicle Camera Limited t/a CameraMatics

Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne

[CAMERAMATICS.COM](https://www.camaramatics.com)

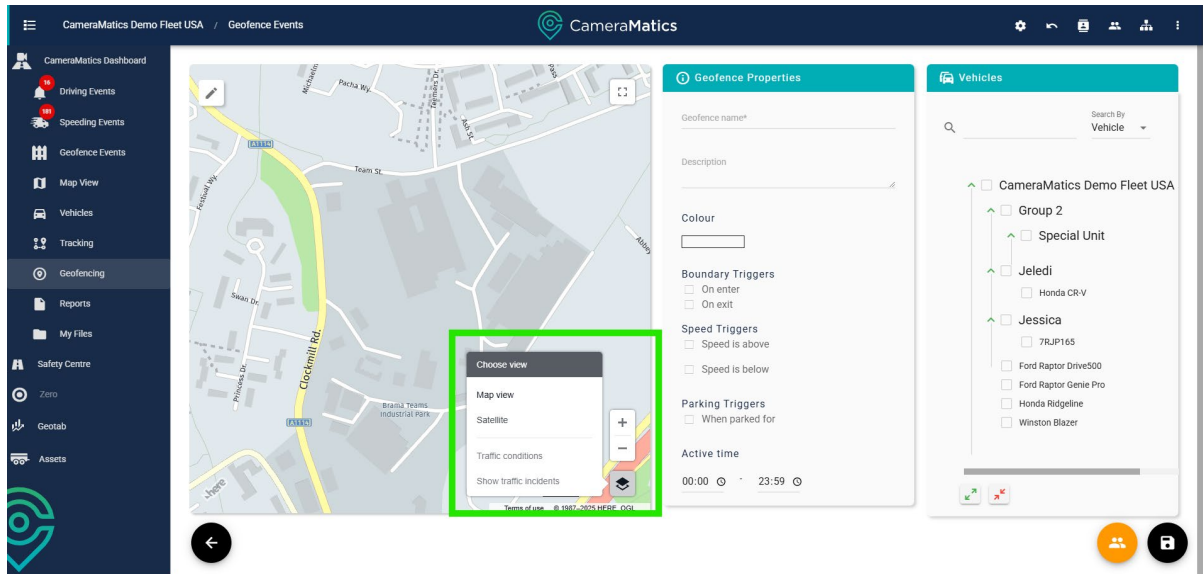

At the top left, click on the pencil to select the shape of the geofence. The pentagon should be selected if you want to create a free-form shape.

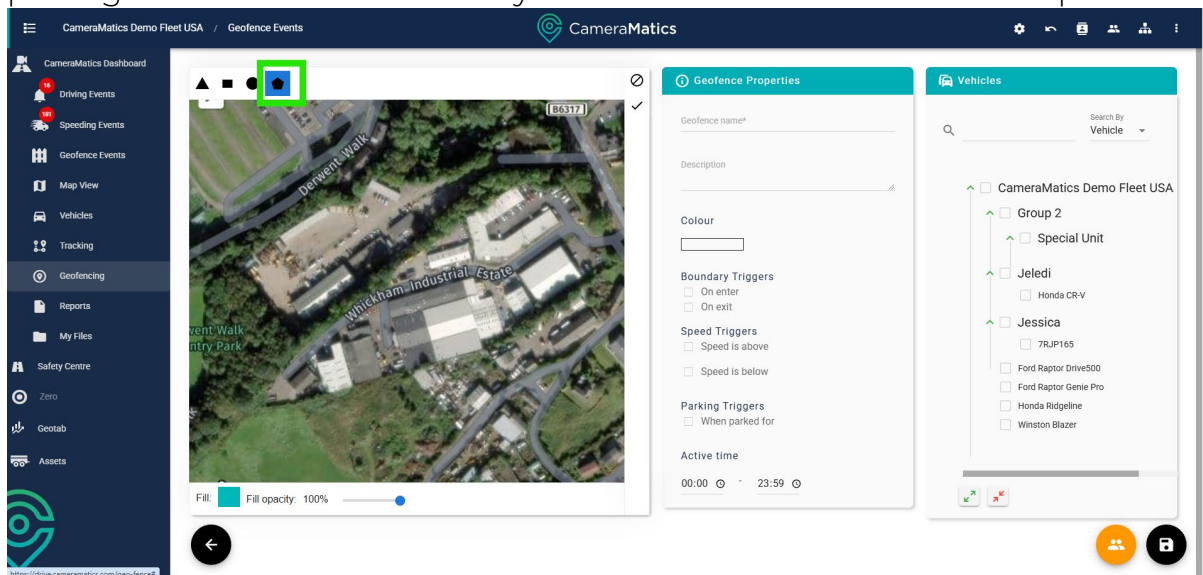

Once you have drawn your shape on the screen, click the tick on the right-hand side to determine the opacity of the shape.

#### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

#### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

#### UK HEAD OFFICE

Unit F3, LEFA Business Park,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562


#### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)

#### Provision Vehicle Camera Limited t/a CameraMatics

Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne


[CAMERAMATICS.COM](https://www.camaramatics.com)

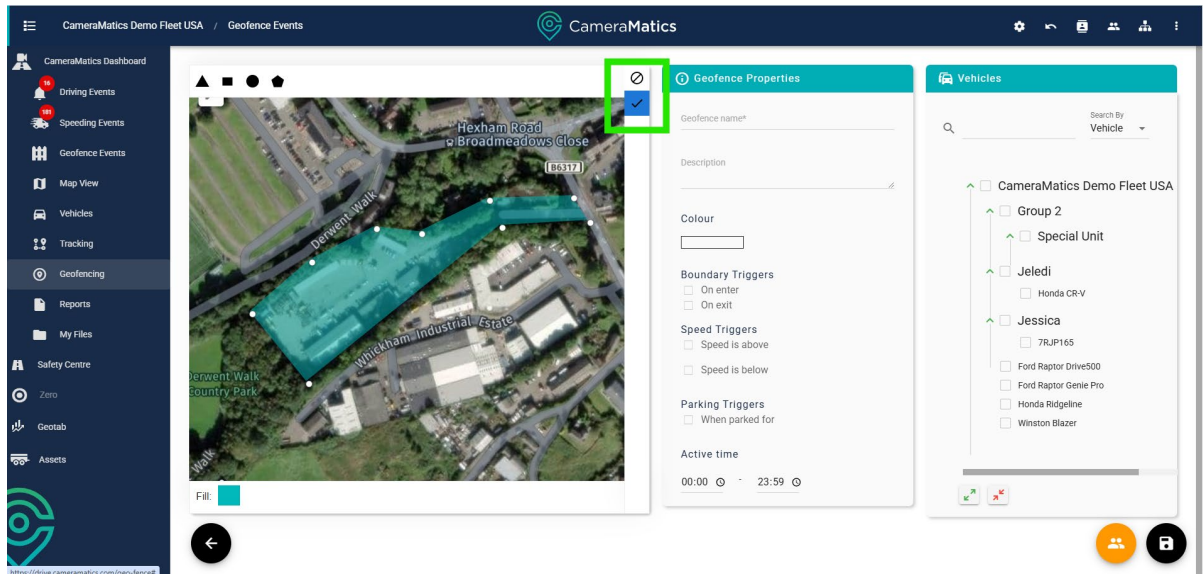

## Selecting the Settings for the Geofence

Now that we are happy with the shape, we need to determine the settings for the geofence itself.

First, provide it with a meaningful name and description, and change the colour of the shape if you wish.

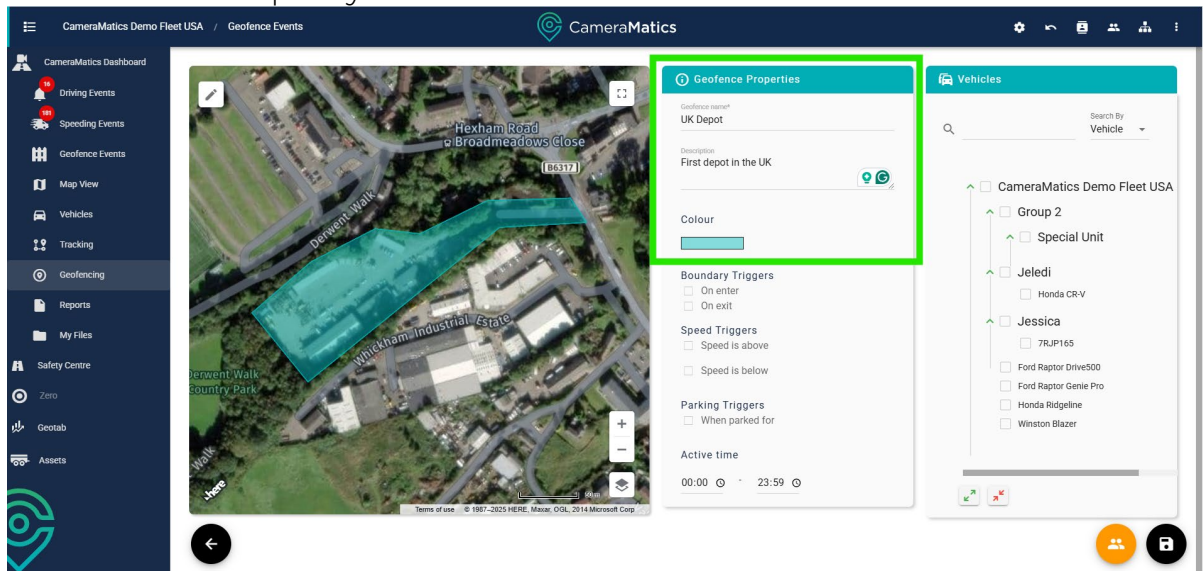

Now we must determine what events will trigger an event in relation to this geofence.

These can include boundary triggers:

- On Enter – When a vehicle enters the geofence
- On Exit – When the vehicle leaves a geofence

### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

### UK HEAD OFFICE

Unit F3, LEFA Business Park,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562

### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)

### Provision Vehicle Camera Limited t/a CameraMatics

Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne

[CAMERAMATICS.COM](https://www.camaramatics.com)

### Boundary Triggers

- ☒ On enter
- ☒ On exit

### Speed triggers:

- Speed is Above – An event is created when vehicle speed goes above the set limit within the area of the geofence.
- Speed is Below – An event is created when vehicle speed goes above the set limit within the area of the geofence. Suitable for locations where vehicles are not meant to stop and have a minimum speed limit in force.

### Speed Triggers

- ☒ Speed is above Speed above  
60 MPH
- ☒ Speed is below Speed below  
5 MPH

### Parking triggers:

- When Parked For – An event is created when a vehicle is parked for more than the specified time within the geofence.

### Parking Triggers

- ☒ When parked for Parking time  
5 minutes

## Active Time

Enables you to set a time period within which events are recorded. This could be the duration of the working day for a worksite, or overnight at a depot in order to detect vehicle theft.

### Active time

00:00 ⌚ - 23:59 ⌚

#### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

#### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

#### UK HEAD OFFICE

Unit F3, LEFA Business Park.,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562

#### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)

#### Provision Vehicle Camera Limited t/a CameraMatics


Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne

[CAMERAMATICS.COM](https://www.cameramatics.com)




## Selecting vehicles for the geofence

You may want only certain vehicles to trigger events in a geofence. To the right, the structure of the company's groups is displayed. You can either select a whole group or you can select individual vehicles to trigger geofence events. Of course, you can select the entire fleet by selecting the top group.

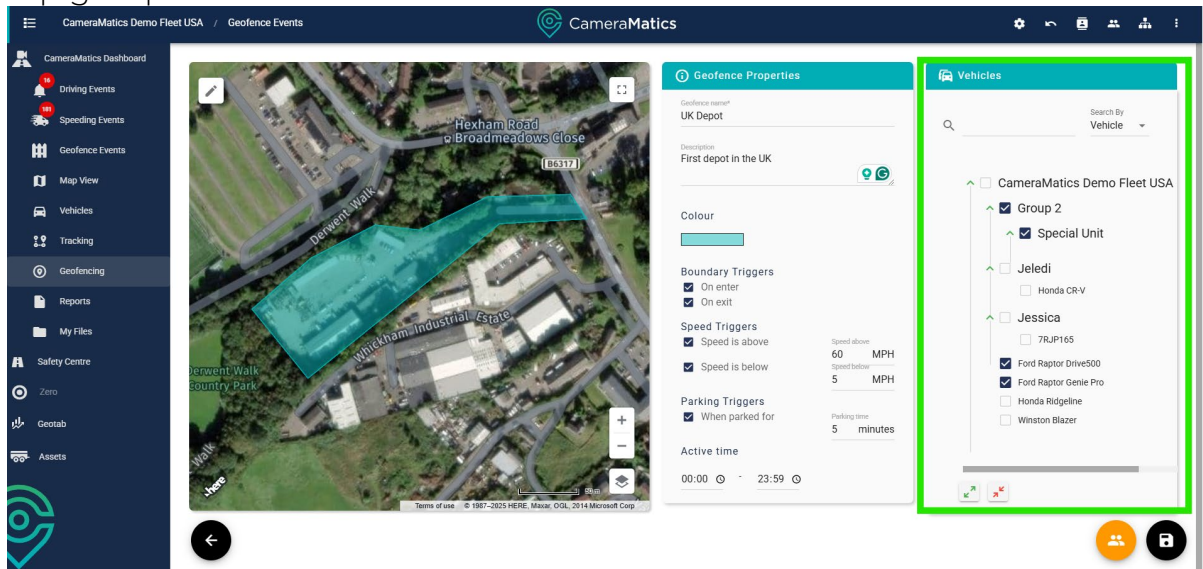

Once done, click save. This geofence will start collecting data immediately. If you select the yellow icon to the left of the save button you can instead share this geofence with any of your contacts.

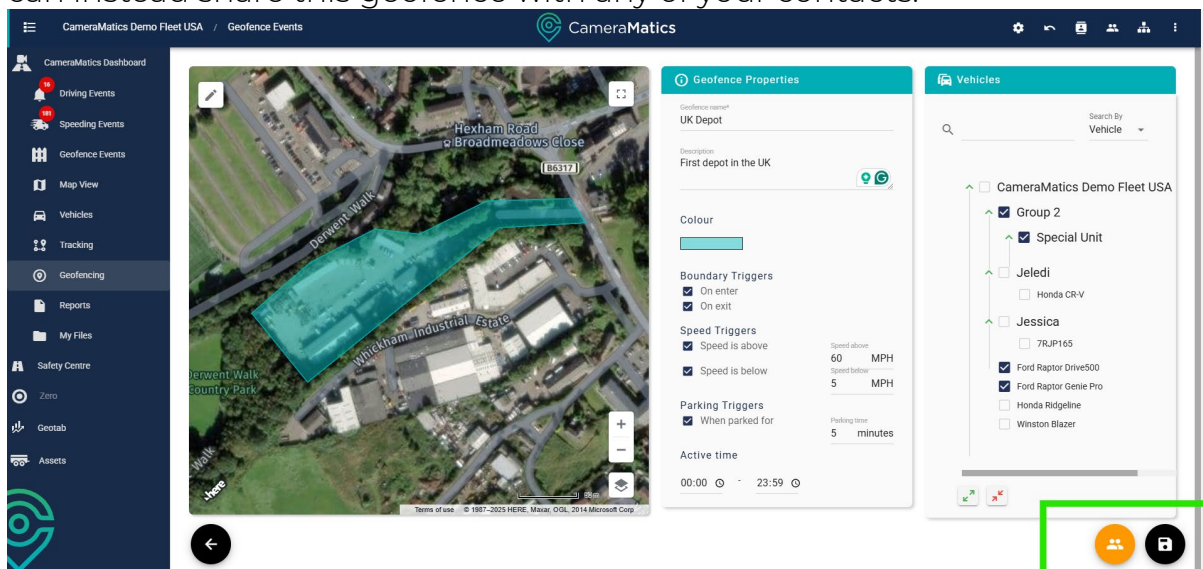

### IRE HEAD OFFICE

Unit 20A Beckett Way,  
Parkwest Business Park,  
Dublin 12,  
Ireland. D12 P8R2  
Tel: +353 (0)1 963 1380

### REGIONAL OFFICE

Arclabs Research &  
Innovation Centre  
WIT West Campus,  
Carriganore,  
Co. Waterford  
Tel: +353 (0)1 963 1380

### UK HEAD OFFICE

Unit F3, LEFA Business Park,  
Sidcup, London  
United Kingdom  
DA14 5BH  
Tel: +44 (0)20 3740 3562

### My Safe Drive Ltd t/a CameraMatics

Registered in Ireland No. 548843  
Directors: M. O'Callaghan, S. Murray, G. Burchell (GB), J. Wyles (GB)

### Provision Vehicle Camera Limited t/a CameraMatics

Registered in England No. 09939849  
Directors: M. O'Callaghan, S. Murray, S. Warne

[CAMERAMATICS.COM](https://www.camaramatics.com)